


DVR/NVR GUI

1) When the GUI first loads click on Apply for System Language

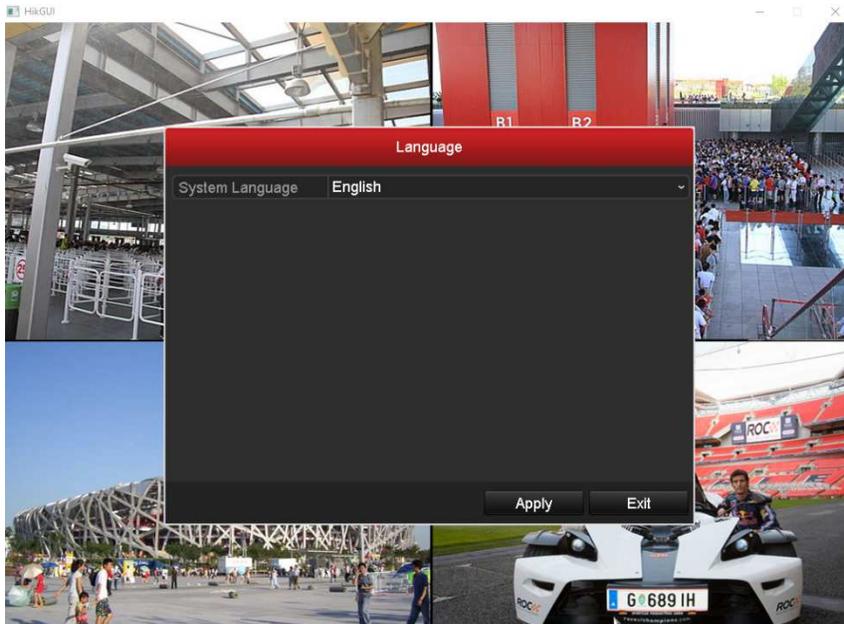


2) Click on Next for the Wizard screen.




3) Create a password, and click Next. By default its set to **admin12345**




4) Click on Defaults until you get to Recording. Check **'Start Recording'** And check **'Motion Detection.'** And OK

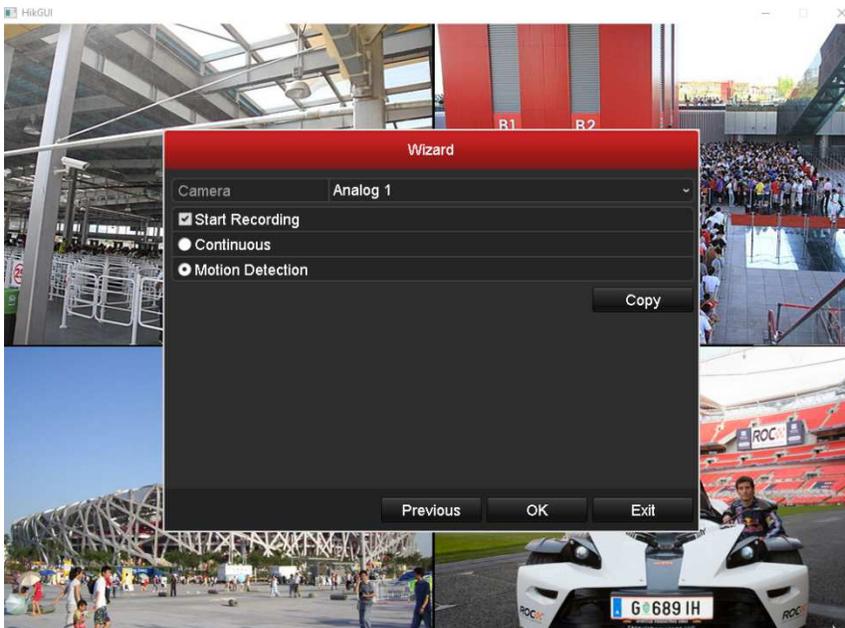


5) If you have installed your Hard-drives you can initialize them at this point.

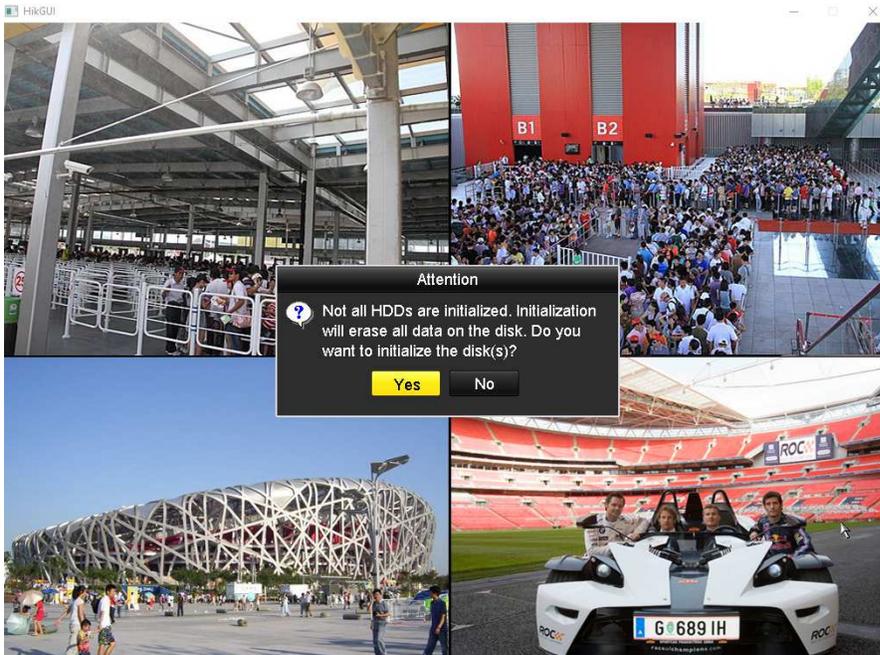

6) Right click then left click Menu

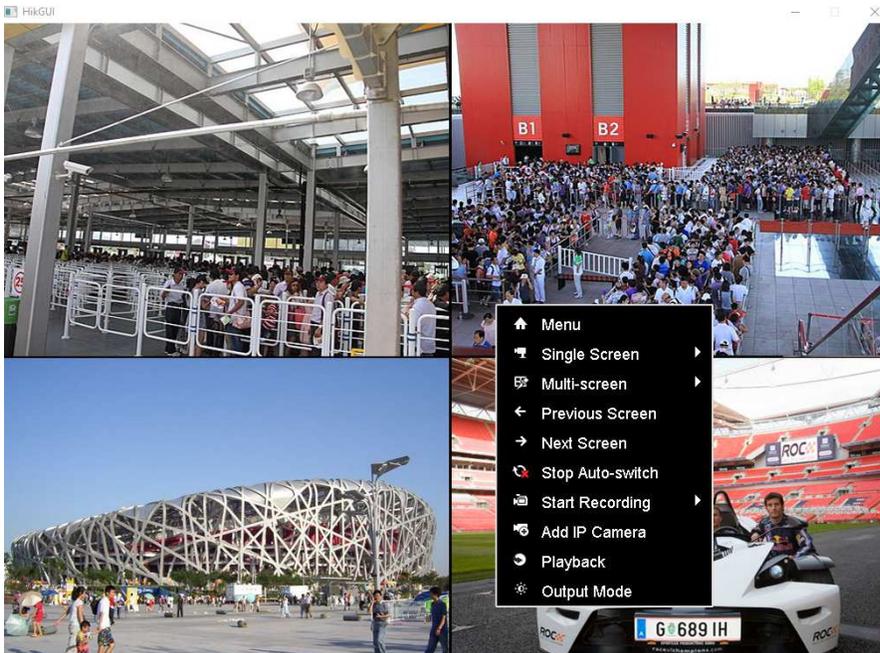


This is the 'Main Menu' screen.

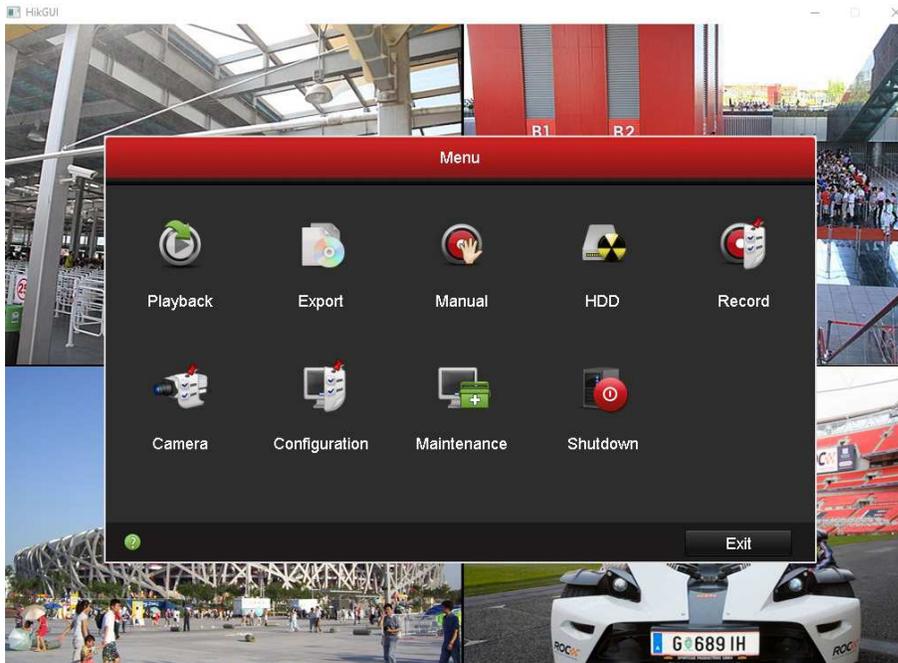

Playback

Here you can playback video from specific dates and times.

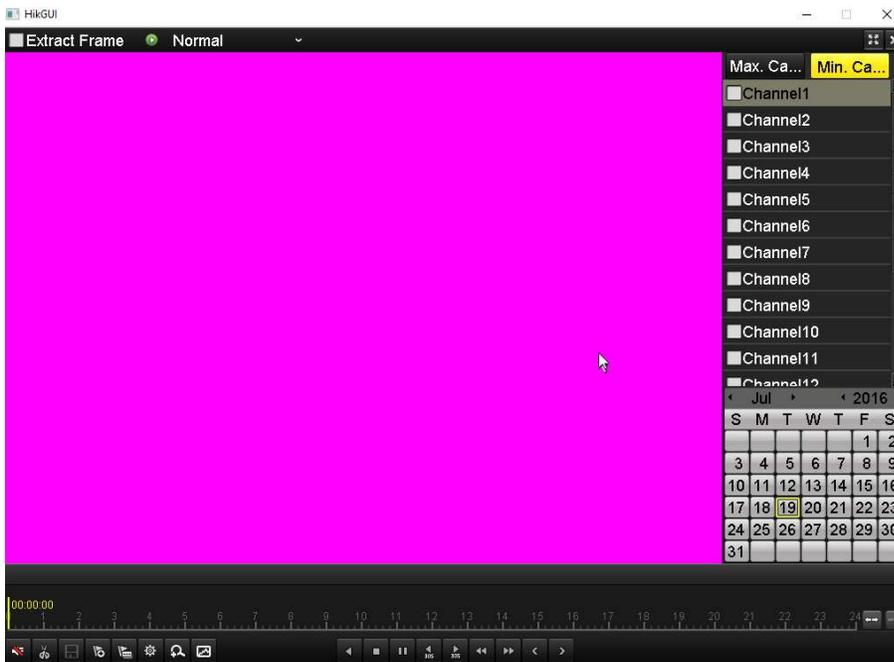

Export

You can export to USB stick via the export, by specifically choosing the date and start time and end time.

The screenshot shows the 'Export' configuration window. The left sidebar has 'Normal' selected, with 'Event' and 'Picture' options below it. The main panel is titled 'Normal' and contains the following settings:

- Analog: A1 A2 A3 A4 A5 A6 A7 A8 A9 A10 A11 A12 A13 A14 A15 A16
- IP Camera: D1
- Start/End time of record: [Empty field]
- Record Mode: Normal
- Record Type: All
- File Type: All
- Start Time: 2016-07-19 00:00:00
- End Time: 2016-07-19 23:59:59

At the bottom left is a 'Live View' button. At the bottom right are 'Search' and 'Back' buttons.

Manual

****Be advised it is best not to change settings here as it will override all previous settings set in CMS etc.****

HDD

Here you can initialize connected hard drives, you can also see the capacity of these drives. Under the advanced tab you can set quotas for hard drive recording and group them.



Record

Here you can set recording parameters, but this is limited, as opposed to setting them in CMS or the web browser.




Camera

Here you can set the parameters of the camera such as Motion, Privacy Mask etc.



Configuration

Here we can set Configuration, daylight savings (Set to Auto DST)

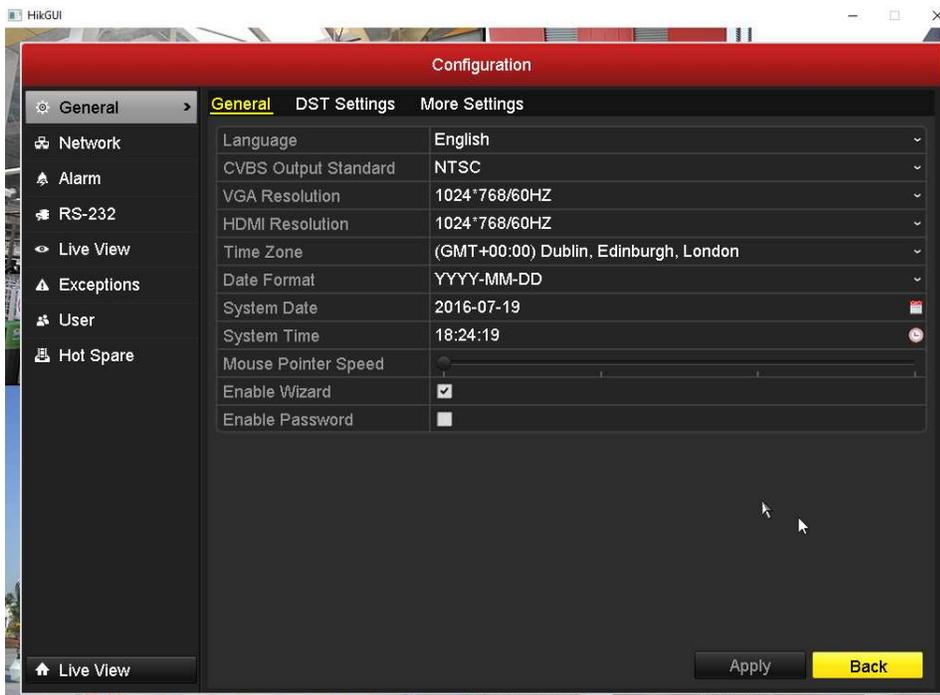


Network

This is where you enter all network info like the IP address, subnet , and gateway of the DVR/NVR.



DDNS

Please see the **DDNS Quick Start.pdf** for more information.

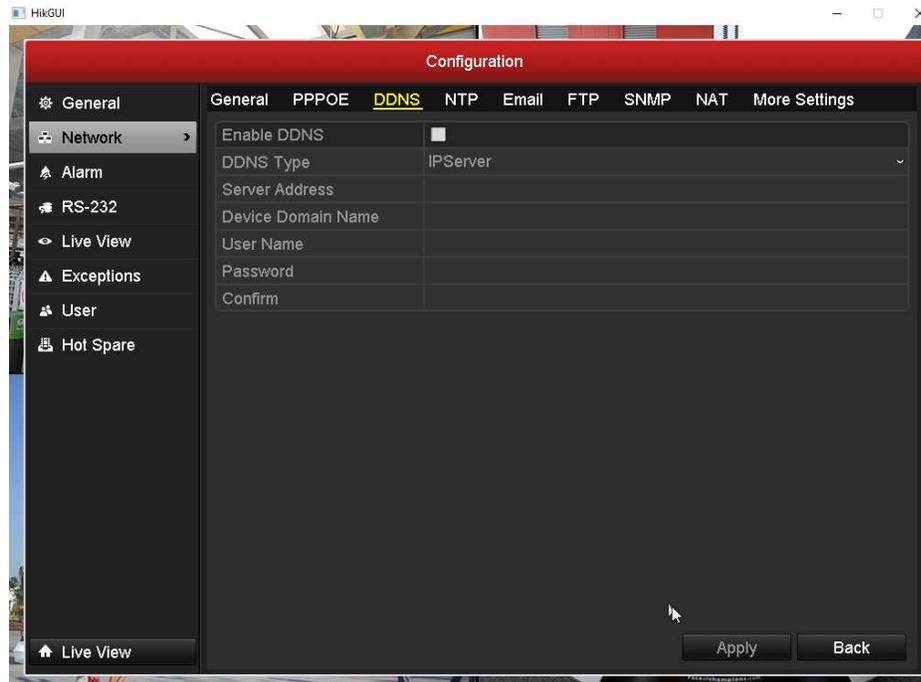

More Settings

This is where you set Server port 8000, HTTP Port 80, and RTSP Port 8554.

