 



Upgrading Camera Firmware via web browser

- 1) Find out the IP address of the camera you are trying to log into. This can be done from the DVR/NVR. From either the CMS client, the Web client, SADP tool, or the DVR/NVR box itself.
- 2) Type the IP address you found in step 1 above into your web browser, in this example I'm going to use IE explorer.




(For information on how to setup IE and other browsers for Live View and playback initially you will need to install and setup the relevant web components. Please see the related document **Navigating the web client.pdf**)

- 3) After you have entered the IP address and hit enter, the browser will take you to this screen.

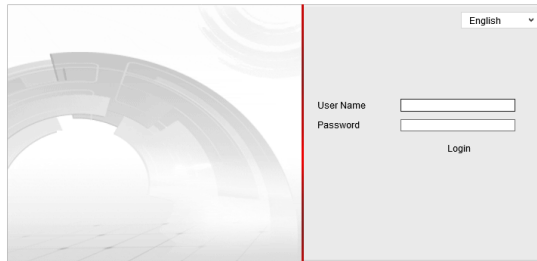

- 4) Once logged in, click on Configuration, go down to Remote Upgrade, select Firmware, and browse to your .dav file you have previously unpacked on your computer.

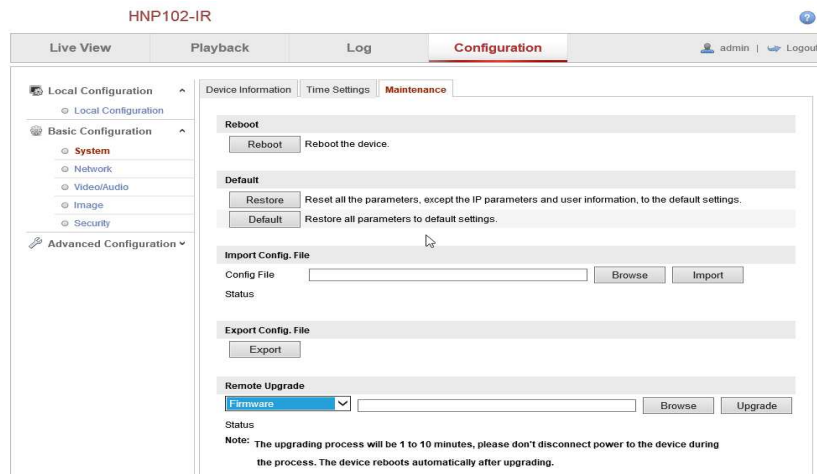

5) Click Upgrade.

Remote Upgrade

Firmware

Status

Note: The upgrading process will be 1 to 10 minutes, please don't disconnect power to the device during the process. The device reboots automatically after upgrading.