


## Quick guide on connecting cameras and 3<sup>rd</sup> party PoE Switch with PoE NVR

### 1. Plug cameras into back of NVR Built-in PoE Switch



### 2. On NVR, go to camera set up page. Click on the edit pencil and edit adding mode from Plug n Play to Manual (Make sure to enter camera password "Hikvision camera default password 12345")

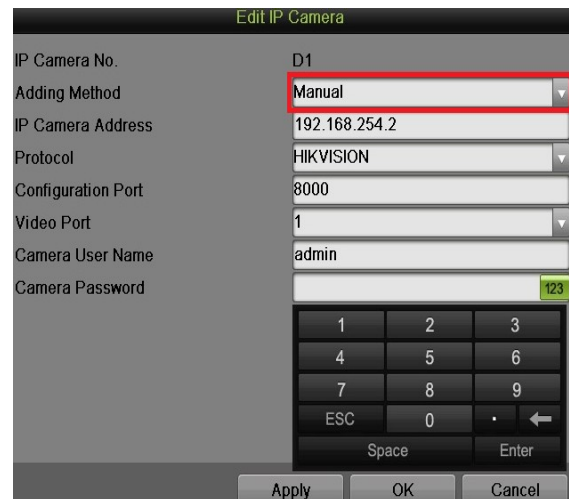

### 3. Unplug cameras from NVR and plug cameras into external PoE switch. Connect one Ethernet cable from 3<sup>rd</sup> party switch to NVR switch. (Make sure to plug cable into port that was switch to Manual Mode)

