



HIKVISION ITALY S.R.L

## Temperature Screening Terminal Email Linkage Configuration

Publisher:	Yijia Cao
Date:	22/07/2020
Firmware Version:	V2.2.6_200716



Hikvision Italy S.R.L

---

## Description

After email linkage is configured, the terminal sends out automatically a notification mail to the receiving mail address when an abnormal temperature event is triggered. The present indication file shows how to configure this email linkage function.

## Supported Models

DS-K1T671TM-3XF


DS-K1TA70MI-T

DS-K5604A-3XF/V


DS-K5671-3XF/ZU

## Configuration (Terminal)

Step 1. Configure the sender, receiver and email server info. Please refer to the image below as an example. To specify, "User Name" "Password" "Confirm Password" refer to the sender email credentials; Enable always "Authentication" to verify credentials; Keep "Enable email" always enabled; Select "Encryption" mode according to type of SMTP Server.

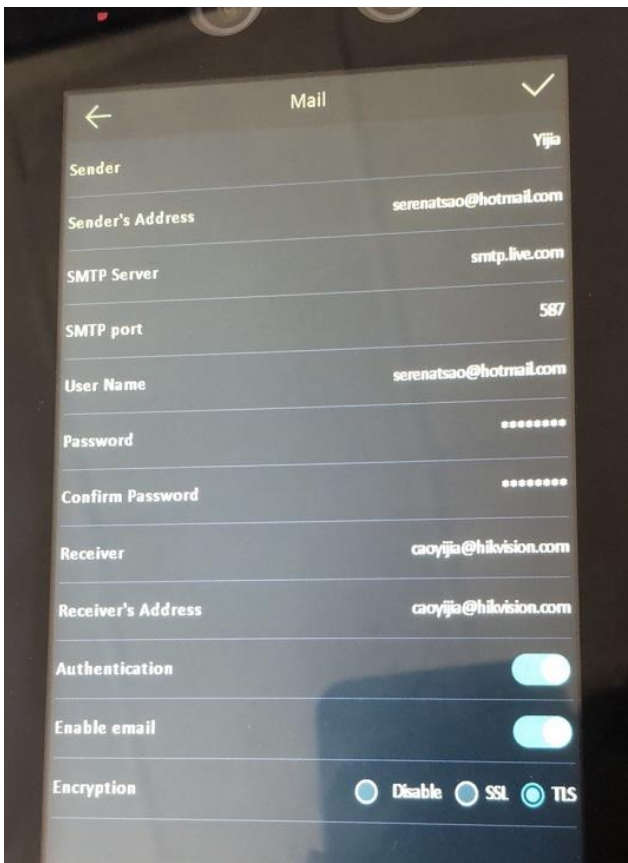

- 
- Step 2. Enable Temperature Detection, then select the temperature measurement mode.
- a. If "Temperature measurement only" is enabled, the notification mail will be sent with one alarm thermal image.
  - b. If "Temperature measurement only" is not enabled (Under access control mode, need to first add person info), the notification mail will be sent with one alarm visible image and one alarm thermal image.

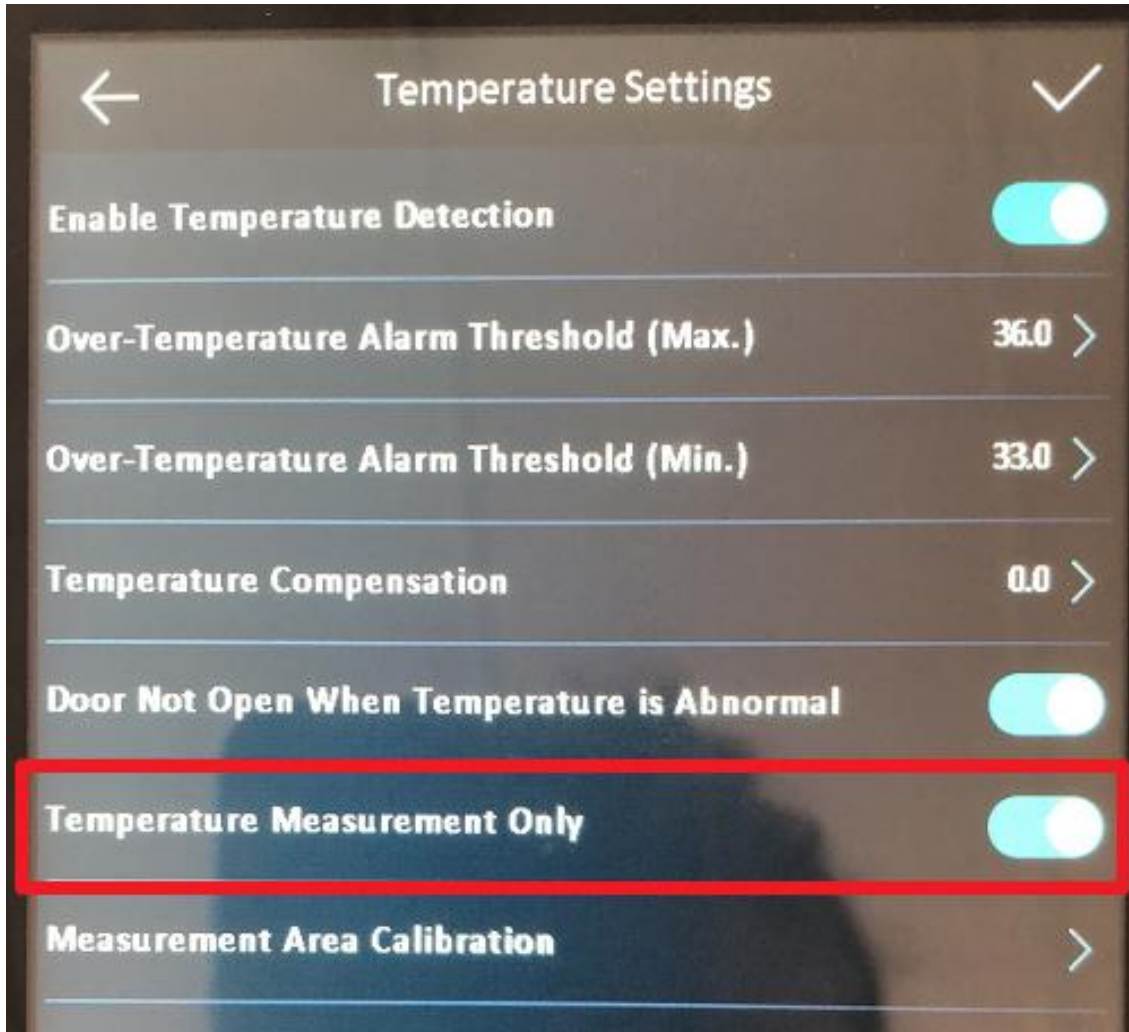

Note:

Example notification mail:

A. With "Temperature Measurement Only":



B. Without "Temperature Measurement Only":

