## How to enable the optical snapshots in temperature only mode

For optical snapshot with temperature only mode, currently it is a bit hustle to set up but it is achievable.

1. Use product-related iVMS-4200 AC(V1.2.50.8\_E) (which is not baseline, baseline will release to support this, maybe at the end of July) to set up. Check the Capture White Light Picture in the remote configuration – Access Control Parameters.

Settings			- 🗆 X
	System	Access Control Parameters	
ŝ	Network	Audio Prompt	
Ä	Alarm	Upload Pictures after Capturing	
•	Others	Save Captured Pictures	
L	Access Control Parameters	Temperature Measurement Only	
	Face Recognition Terminal Settings Face Picture Parameters	Capture White Light Picture	
	Supplement Light Parameters	Door Not Open When Temperature is Abnormal	
	No. Settings	Must Wear Face Mask	
1	Image	Must wear Face Mask	After enabling this function, if the authenticated person does not wear a face mas
مکر	Operation		the door will not open.
-\r-	Status	Reminder of Wearing Face Mask	
		Over-Temperature Alarm Threshold (Max.)	37.2 ⊘ ℃
			The threshold should be between 35.1 $^{\circ}\mathrm{C}$ and 44.9 $^{\circ}\mathrm{C}.$ The Max, threshold shoul be larger than the Min. one.
		Save	
		<	>

2. Afterwards, you can then use normal baseline 4200 to receive the optical snapshots even in temperature only mode.