

VSPlayer Software

User Manual

UD.6L0202D1505A01

Thank you for purchasing our product. This manual applies to VSPlayer software, please read it carefully for the better use of this software.

This manual may contain several technically inaccurate points or printing errors, and the content is subject to change without notice. The updates will be added into the new version of this manual.

We will readily improve or update the products or procedures described in the manual.

Contents

Chapter 1 Introduction
1.1 Overview
1.2 Main Features3
1.3 System Requirements3
1.4 Conventions4
Chapter 2 Getting Started
2.1 Running the Software5
2.2 Player Settings6
2.2.1 Basic Settings:6
2.2.2 Capture Settings7
2.2.3 Hotkey Settings7
Chapter 3 Playing Video Files9
3.1 Adding Video Files9
3.2 Playing Control10
3.3 Merging Files
3.4 Transcoding File14
3.5 Synchronous Playback15
3.6 Capture and Continuous Capture16
3.7 Clipping File16

Chapter 1 Introduction

1.1 Overview

The VSPlayer software is a media player designed for Windows OS. With user-friendly GUI, the software provides an intuitive, convenient way for playing media file and video control, and supports multiple audio and video formats.

1.2 Main Features

- Support playing the video files of the various kinds of devices, such as DVR, encoder, decoder, compression card, network camera, network speed dome, etc.
- Support multiple video file formats, including Hikvision H.264, standard H.264 and standard MPEG4.
- Support 1, 4, 9, 16-window division.
- Multiple languages GUI are provided.
- Capture pictures and continuous capture during playing.
- Get the file information.
- Support file clipping, file merging and file transcoding.
- Support watermark.
- Digital zoom.
- Accurately position the playback point by frame or time.
- Synchronous playback.
- Reverse playback.
- Display the VCA information on the video.
- Support playing encrypted file.
- Repeat between the configured two points.
- Live view via URL mode with RTSP.
- Support motion flow to provide fluent video.

1.3 System Requirements

Operating System: Microsoft Windows 8 / Windows 7 / Window XP (32-bit) **RAM:** 512MB or above

1.4 Conventions

In order to simplify the description, we define the "VSPlayer software" as "software" in the following chapters.

Chapter 2 Getting Started

2.1 Running the Software

The software is installation-free and you can directly decompress the downloaded package and double-click the **i** in the folder to run the software.

Note: To remove the software, you can just delete the folder.

The main interface of the software is shown below.



No.	Icon / Button	Description	
	+	Add the local media file to the software.	
1	ā	Delete the added files.	
	다	Set the playing mode for the file.	
2	Open File	Display window area. You can click Open File to select the	
2	Open rue	file for playing.	
	۵	Select file, set language, configure player settings and	
		check the software information.	
		Minimize the software.	
		Maximize the software.	
	×	Exit the software.	
3	Ð.	Digital zoom.	
	*	Clip the file.	
		Capture the playing video.	
	٩	Continuous capture of the playing video.	
		Click to select whether to keep the window on top of all	
		other windows.	

		Display the playing window in full-screen mode.	
		Reverse play.	
	¥	Slow forward.	
		Frame backward.	
		Play / pause the video.	
4		Stop playing.	
		Frame forward.	
	*	Fast forward.	
	Ħ	Synchronous playback.	
		Audio on / mute.	
	III	Set window-division.	
	lí	Hide the playlist.	
5		Select files or open live view via URL mode.	
	ţ1	Activate the transcode and merge window.	

2.2 Player Settings

Click and select **Settings**, or select **Settings** on the right-click menu of the playing window to enter the Player Settings interface. You can set basic, capture and hotkey settings for the player.



2.2.1 Basic Settings:

Steps:

- 1. Click **Basic** to enter the Basic Setting interface.
- 2. Set the option for Stick on Top.

Stick on Top When Playing: Keep the window on the top of all other windows when playing the file.

Never Stick on Top: Never keep the windon on the top of all other windows at any time. **Always Stick on Top**: Always keep the windon on the top of all other windows.

- 3. Check the checkbox of **Save List File When Exit** to keep the playlist when you exit and you can get the playlist next time you open the software.
- 4. You can also click **Restore Default Settings** to reset the parameters to the default values.
- 5. Click **Apply** to apply the settings. Or click **OK** to save the settings and exit.

2.2.2 Capture Settings

Steps:

- 1. Click **Capture** to enter the Capture Settings interface.
- 2. Select the Format for the captured picture.
- 3. Click **Browse** to set the saving path for captured pictures.
- 4. For continuous capture, select the mode as by time / by frame, set the set the time / frame interval in the range of 1 to 100 seconds / frames, and configure the max. capture number in the range of 1 to 200.
- 5. You can also click **Restore Default Settings** to reset the parameters to the default values.
- 6. Click **Apply** to apply the settings. Or click **OK** to save the settings and exit.

Player Settings		×
*	Ō	é
Basic	Capture	Hotkey
Output Setting Format :	JFEG -	
Saving Path:	\VSPlayerV7.0\Screenshot\	Browse
Continuous Ca	pture Settings :	
Mode :	By Time 🔻	
Interval :	1 🗘 Second	
Max. Capture Number :	100 ‡	
		Restore Default Settings
		OK Cancel Apply

2.2.3 Hotkey Settings

Steps:

- 1. Click **Hotkey** to enter the Hotkey Settings interface. You can view the keyboard hotkeys for the common functions of the software.
- 2. Click the text field, and you can change the hotkey as desired.
- 3. You can also click **Restore Default Settings** to reset the parameters to the default values.
- 4. Click Apply to apply the settings. Or click OK to save the settings and exit.

Player Settings			×
×	l	Ō	
Basic			Hotkey
DI/D		Valuata	
Stop :	Space Ctrl+S	First Frame :	Ctrl+K
Exit :	Ctrl+W	Last Frame :	Ctrl+J
Frame Forward :	Left	Capture :	F11
Frame Backward :	Right	Nomal/Full Screen :	Ctrl+F
Fast Forward :	Ctrl+Right		
Slow Forward :	Ctrl+Left		
Volume + :	Up		
		Rest	ore Default Settings
		OK	Cancel Apply

Chapter 3 Playing Video Files

Before playing the video or view the live video, you should add the supported media file to the playlist of the software.

3.1 Adding Video Files

The software provides 2 ways for adding the local video files, including adding files of the selected folder and adding files directly. And you can also open live view of device via URL mode. *Steps:*

Adding Files

Click I in the playlist area, or click Open File on the playing window, or click and select Open File, or click and select Open File under Open.

Note: The **Open File** on the playing window is only available when no video is playing and the window-division is 1.

2. In the pop-up window, select the file for adding. You can also click-and-hold Shift or Ctrl key to select multiple files.

Adding Folders

- 1. Click besides **Open File** on the playing window and select **Open Directory**, or click and select **Open Directory**, or click and select **Open Directory** under **Open**.
- 2. In the pop-up window, select a folder for adding. The supported files under the folders will be added to the software.

URL Mode

- 1. Click besides **Open File** on the playing window and select **Open URL**, or click and select **Open URL**, or click and select **Open URL** under **Open**.
- 2. In the pop-up window, input the URL of the video and select the connection mode according to actual needs.

Notes:

- The format of the URL should be like rtsp://admin:12345@172.10.7.157/mpeg4/ch01/main/av_stream.
- Only RTSP is supported for URL mode.

Open URL			×
URL:			
Connection Mode:	TCP		
		ОК	Cancel

The following table shows the description of the right-click menu when you right-click the file. *Note:* The right-click menu varies according to different file types.

Play/Pause:	Play/pause the file.
Delete File:	Delete the selected file(s) from the software.
Remove Invalid File:	Delete the all the invalid file of the playlist. The invalid files are marked
	with Invalid.
Clear Playlist:	Delete all the files of the playlist.
File Location:	Open the folder of the file.
Enter Key:	Enter the key of the file which is encrypted.

3.2 Playing Control

After adding the video files to the playlist, you can play the file and achieve the related functions to control the video playing.

The successfully added files list on the playlist panel and you can click-and-drag the file to the display window or double-click it for playing.

Note: For the encrypted files, you should enter the key in the pop-up window to play it.



Single-window Division



Multi-window Division

You can control the video playing by clicking the provided icons. *Note:* Some icons are not available for the live view which accessing via URL mode.

То	Do this	
Set Playing Mode:	Click 📰 to set the playing mode for the file as single, order,	
	repeat one or repeat all.	
Reverse play:	: Click 🕻 to play the video reversely.	
Slow forward:	Click 【 to set playback speed as 1/2, 1/4, 1/8 or 1/16.	
	Click 💶 to enable playback frame by frame. Click it once to	
Frame backward:	go backward by one frame.	
Play / Pause:	Cli ck D or D to play or pause the video.	
Stop: Click to stop playing.		
Frame forward:	Click \mathbf{D} to enable playback frame by frame. Click it once to	
	go forward by one frame.	
Fast forward:	Click 💟 to set the playback speed as 2X, 4X, 8X or 16X.	
	Click 🛃 to start synchronous play under multi-window	
Synchronous play:	mode. The files for synchronous play should have overlapped	
Synchronous play.	time duration. Refer to Chapter 3.5 Synchronous Playback for	
	details.	
Audio control:	Click 💵 to turn on/off the audio.	
	Click 🏢 to set window division as 1*1, 2*2, 3*3 or 4*4. You	
Window division:	can select a window and double-click a video file to play it.	
	See the Figure Multi-window Division above.	
Digital zoom:	Click 🔲 to enable digital zoom. Click 🖬 or 🗖, or use the	
	mouse wheel to zoom in or zoom out. Click-and-drag the	

	image to move it under zoom-in mode.		
	Click 📓 to clip the file and get the required video footage.		
File clipping:	Refer to Chapter 3.7 Clipping File for details.		
Conturo	Click 🔟 to capture the playing video. Refer to Chapter 3.6		
Capture:	Capture and Continuous Capture for details.		
Continuous capture:	Click 📓 to start continuous capture of the playing video.		
	Refer to Chapter 3.6 Capture and Continuous Capture for		
	details.		
Stick on Ton	Click 📓 to select whether to keep the window on top of all		
Stick on Top:	other windows.		
Full screen:	Click 📕 to display the playing window in full-screen mode.		

Or you can right-click on the playing window to access the play control menu.

Note: Some items are not available for the live view which accessing via URL mode.

Full Screen	
Stick on Top	Þ
Play Control	Þ
Play Mode	Þ
Mute	
Image Control	Þ
Aspect Ratio	Þ
Window Division	Þ
Capture	
Continuous Capture	
Digital Zoom	
Clip	
Transcode	
Merge	
Settings	
File Information	

Full Screen	Display the playing window in full-screen mode.	
	Stick on Top When Playing	Select whether to keep the window on the top
Stick on Top	Never Stick on Top	of all other windows
	Always Stick on Top	
	Locate by Time: Accurately pos	sition the playback point by time.
	Locate by Frame: Accurately po	osition the playback point by frame.
	First Frame: Go to the first frame of the video.	
	Last Frame: Go to the last frame of the video.	
Play Control	Drop Frame: Drop the frame to reduce the CPU usage.	
Flay Control	Motion Flow: Enable the function to get the fluent video, especially for motion	
	image.	
	Repeat A-B Segment: Set t	he playing mode as repeating between the
	configured two points of the v	ideo.
	For other items, please refer to	o the description of the related icons.
Play Mode	Set the playing mode for the fi	le as single, order, repeat one or repeat all.

Mute	Turn off the audio of the file.		
	Image Rotation	Rotate the image during playing.	
	Color Adjust	Set the parameters of saturation, hue, contrast and brightness	
Imaga Control	Watermark	Check the watermark information of the video.	
image Control		VCA: Display the VCA information.	
	VCA Info	Motion Detection: Highlight the motion of the	
		video.	
		POS Text Overlay: Display the POS text.	
Aspect Batio	Set the video size as original s	ize, 4:3, 16:9 or Fill Window. Set the window size	
Aspect Ratio	as 2X, original size, 1/2 or 1/4.		
Window	1/1/9/16-window division	can be set	
Division	1/4/9/16-window division can be set.		
Captura	Capture the playing video. Refer to Chapter 3.6 Capture and Continuous		
Capture	Capture for details.		
Continuous	Continuous capture of the playing video. Refer to Chapter 3.6 Capture and		
Capture	Continuous Capture for details.		
Digital Zoom	Enable digital zoom of the video.		
Clin	Clip the file to get the required video footage. Refer to Chapter 3.7 Clipping File		
Спр	for details.		
Transcedo	Transcode the video format	of the file to the standard AVI format. Refer to	
Transcode	Chapter 3.4 Transcoding File for detailed configuration.		
Morgo	Merge multiple files (>=2) into	b a single large file. Refer to Chapter 3.3 Merging	
werge	Files for details.		
Sottings	Configure the player settings	s, including basic, capture and hotkey settings.	
Settings	Please refer to Chapter 2.2 Player Settings for detailed information.		
File	Check the detailed information of the file, such as file name, video length, file		
Information	size, file type and resolution, etc.		

3.3 Merging Files

You can merge multiple files into a single large file to view all the needed files continuously. *Note:* This function is not supported by the live view which accessing via URL mode.

Steps:

- 1. Click and select **Merge**, or select **Merge** on the right-click menu of the playing window to enter the Merge interface.
- 2. Click **Add** to select the files from local PC, or click **Import** to select the files added to the playlist.

Merge	l.		×	Im	po	rt	×
+ Add	Import		× † +	\checkmark		File Name	
Status	File Name	Video Length	File Size			D:\XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	2
٩	20140524_20140524152559_20140524152826_144	146s	35.92 MB			D:\ XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	2
٩	20140524_20140524152907_20140524152918_144	11s	2.85 MB	\checkmark		D:\`XXXXXXXXXXXXXXXXXXXXXXIntersection_IP Camera1_Int	t
۲	20140524_20140524152546_20140524152827_144	160s	40.82 MB				
Format Saving F	: MP4 Path:	Br	rowse Open Dir				
			Start			O	<

- 3. (Optional) click to select a file and click × to remove it from the merging list, click ↑ or ↓ to move the file up or down to adjust its merging position.
- 4. Click **Browse** to set a saving path and file name for the merged file. You can click **Open Dir.** to open the directory.
- 5. Click **Start** to start merging the files. You can click **Stop** during the merging process.
- 6. After the merging is done, a hint of "Merging completed." will pop up. Click **OK** to confirm.

3.4 Transcoding File

You can transcode the files to the standard AVI format files.

Note: This function is not supported by the live view which accessing via URL mode.

Steps:

- 1. Click and select **Transcode**, or select **Transcode** on the right-click menu of the playing window to enter the Transcode interface.
- 2. Click Add to select the files from local PC, or click 🖃 and select Import to select the files added to the playlist.

Impor	rt ×						
\checkmark	File Name						
<	D:\XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX						
~	D:\XXXXXXXXXXXXXXXXXXXXX20140524_20140524155950_2						
\checkmark	D:\XXXXXXXXXXXXXXXXXXXXXIntersection_IP Camera1_Int						
	UK						

3. (Optional) click to select a file and click Remove to remove it from the transcode list, click

File Location to open the folder of the file.

4. Click **Start Transcoding** and click **Browse** to set the saving path for the file in the pop-up window.

Settings	×
Format :	Standard AVI
Saving Path:	Browse
	Transcode Cancel

- 5. Click **Transcode** to start transcoding the file. You can click **Stop Transcoding** during the transcode process.
- 6. After successfully transcoding, the progress of the file changes to Completed. You can click Open Dir. to open the directory of the transcoded file.

Tra	Transcode X							
+	+ Add 🗸 📔 Start Transcoding 🔳 Stop Transcoding 🗙 Remove 🚞 File Location							
	Status	File Name	Video Length	File Size	Progress			
	Ð	20140524_20140524152907_2014052415	11s	2.85 MB	47%			

3.5 Synchronous Playback

The video files can be played back in synchronization if they have overlapped time duration. *Note:* This function is not supported by the live view which accessing via URL mode.

Steps:

- 1. Click III and select a multi-window (2x2, 3x3 or 4X4) division.
- 2. Select a window and double-click a video file to play it.
- 3. Repeat step 2 to start playing multiple video files.
- Click I to start synchronous play.
 Note: The files for synchronous play should have overlapped time duration.
- 5. (Optional) You can drag the **Constant and Second Second**



3.6 Capture and Continuous Capture

You can take pictures of the playing video and save them to local PC. There are two ways available for capturing pictures, including Capture and Continuous Capture.

Capture: During the video playing, click **t** to take a picture for the video. Refer to *Chapter 2.2.2 Capture Settings* for the saving path and picture format of the captured pictures.

Continuous Capture: During the video playing, click **a** to start continuous capture of the playing video to take pictures continuously. You can click **a** to stop the continuous capture manually. Otherwise, the continuous capture stops after the number of captured pictures has reached the configured maximum capture number. Refer to *Chapter 2.2.2 Capture Settings* for the saving path of the captured pictures and the related parameters.

3.7 Clipping File

During playback, you can clip the file to get the required video footage.

Note: This function is not supported by the live view which accessing via URL mode.

Steps:

1. During the video playing, click 📓 and the clip panel displays.



- 2. Drag □ to set the desired starting and end position of the video footage. You can also click
 I and □ to adjust the position.
- 3. (Optional) You can click **Preview** to view the clippled video.
- 4. Click **Clip** and select the saving path in the pop-up window to save the video footage.



HIKVISION | www.hikvision.com